


ANCHOR TRENCH

1. DIG 6"X6" TRENCH
2. LAY BLANKET IN TRENCH
3. STAPLE AT 1.5' INTERVALS
4. BACKFILL WITH NATURAL SOIL AND COMPACT

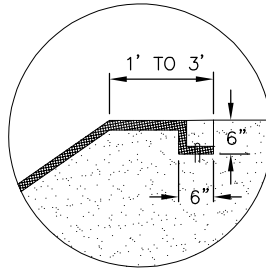

NOTE:
STAPLE DENSITY SHALL CONFORM TO
MANUFACTURERS SPECIFICATIONS

NOTE:
POINT 1 MUST BE A
MINIMUM OF 6" HIGHER
THAN POINT 2 TO ENSURE
THAT WATER FLOWS OVER
THE DIKE AND NOT
AROUND THE ENDS

